

G 1 A APPLICATION OF NO VOLTAGE



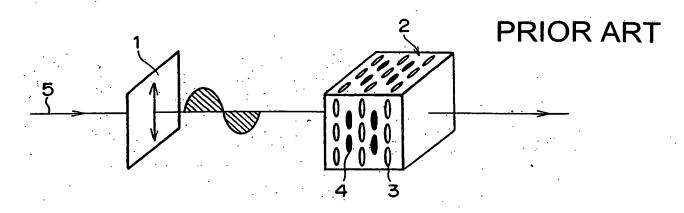


FIG. 1B APPLICATION OF VOLTAGE

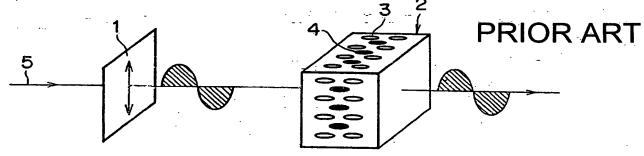

F I G.1C DRIVE WAVEFORM OF RECTANGULAR WAVE

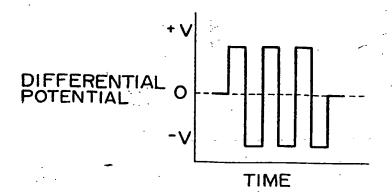

PRIOR ART